




Anycubic Kobra 3 Combo User Manual

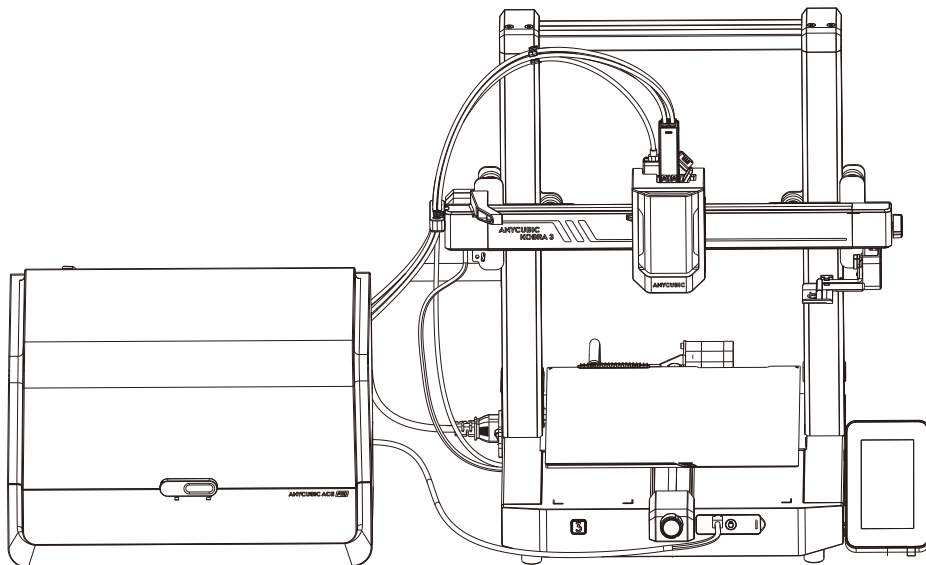

The product picture is for reference only. Please refer to the actual product.

Dear customer,

Thank you for choosing **ANYCUBIC** products.

Maybe you are familiar with 3D printing technology or have purchased **ANYCUBIC** printers before, but we still highly recommend that you read this manual carefully. The installation techniques and precautions in this manual can help you avoid any unnecessary damage or frustration.

Please visit <https://support.anycubic.com/> to contact us if you have any question. You can also gain more information such as software, videos, models from the website.



ANYCUBIC APP



ANYCUBIC Wiki



ANYCUBIC Support Center

Team **ANYCUBIC**

Copyrighted by "Shenzhen Anycubic Technology Co., Ltd ", all rights reserved.

Content

1	Product overview	1
----------	-------------------------	---

2	Machine Installation	4
	Connect print head cable	4
	Connect print head	5
	Install screen	6
	Connect the X-axis motor cable	7
	Install cable holder	8
	Install purge wiper	9
	connect filament tube	10
	Install spool holder	11
	Install ACE Pro	12
	check before use	14

3	Power-on guide	16
----------	-----------------------	----

4	Printer binding	19
	APP	19
	Anycubic Slicer	20



5	Print model	23
----------	--------------------	----

6	Other function descriptions	24
----------	------------------------------------	----



7	Maintenance recommendation	26
----------	-----------------------------------	----

8	Attention	29
----------	------------------	----

Product Overview

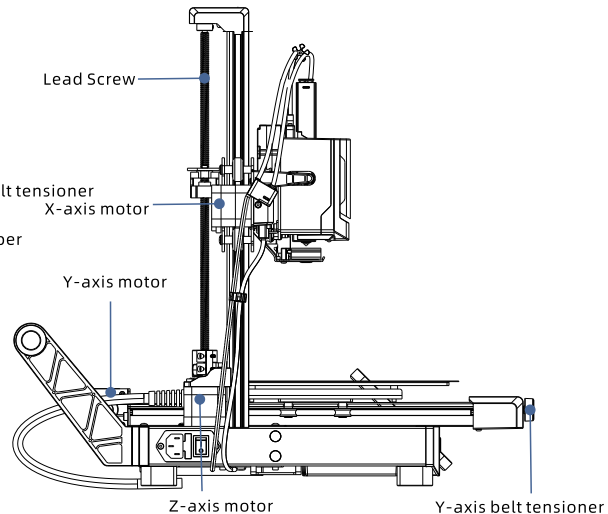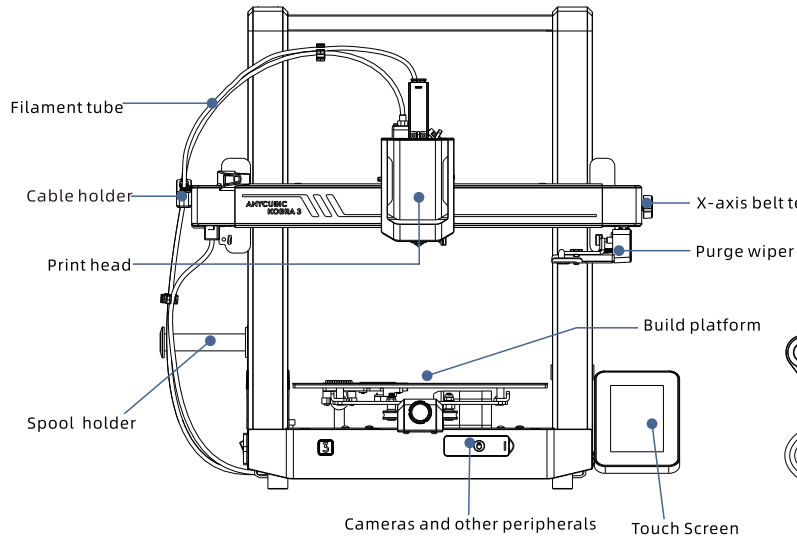


Product Overview

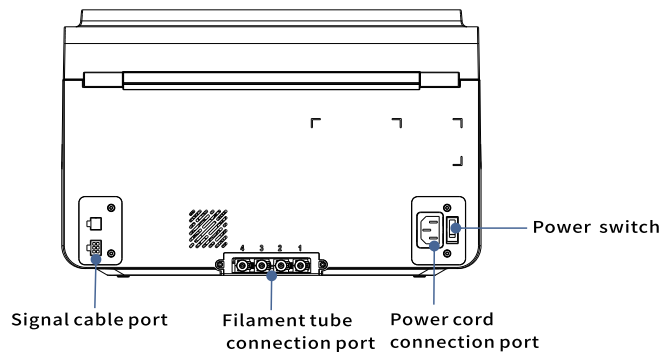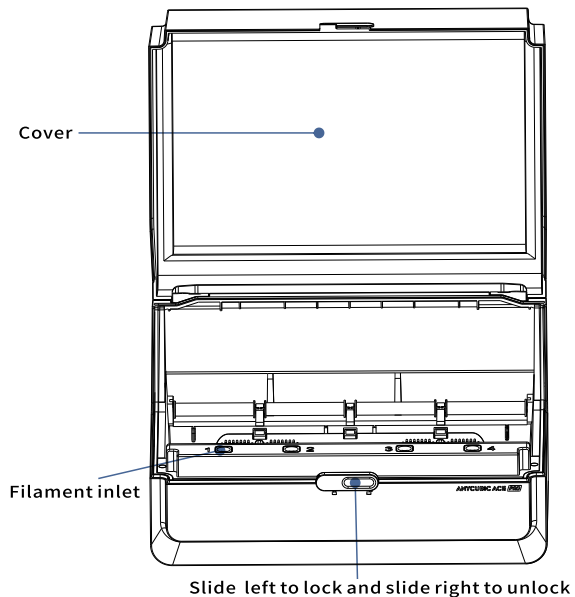

Packing List


The following pictures are for reference only. Please refer to the actual object.



Kobra 3 Printer



ANYCUBIC Color Engine Pro
(ACE Pro)



Printhead



Touch Screen



Spool Holder




Cable Holder




Purge Wiper



Bag NO.1
M2*14 (2pcs)



Bag NO.2
M3*6 (4pcs)



Bag NO.3
M4*16 (2pcs)



Bag NO.4
M3*10 (1pcs)
M3*8 (1pcs)



U-DISK
(1pcs)



Power cord
(2pcs)



Signal cable
(1pcs)



Cable organizer
(4pcs)



Filament tube
(5pcs)



Wrench
(1 set)



4.0/3.0/2.5/2.0/1.5



Filament



Grease



Nozzle Cleaner

Technical Specification

Printing

Technology:FDM (Fused Deposition Modeling)

Build Size:250 mm (L) × 250 mm (W) × 260mm (H)

Layer Thickness:0.08 - 0.28mm

Positioning Accuracy:X / Y / Z 0.0125 / 0.0125 / 0.0025 mm

Extruder Quantity:Single

Nozzle Diameter:0.4 mm

Supported Materials:PLA/TPU/PETG/ABS etc

Temperature

Ambient Operating Temperature:8 °C - 40 °C

Operational Extruder Temperature:Max 300 °C

Operational Print Bed Temperature :Max 110 °C

Software

Slicing Software:AnycubicSlicer/PrusaSlicer/Cura/Orca

Software Input Formats: .STL/.OBJ

Software Output Formats:GCode

Connectivity:U-DISK,AC Cloud,AnycubicSlicer

Electrical

Power Input:110 V / 220 V AC, 50 / 60 Hz

Rated Power:400 W

Physical Dimensions

Printer Dimentions 452.9mm (L) × 504.7mm (W) × 483 mm (H)

Biggest Printer Dimentions:525.8mm (L) × 521mm (W) × 483 mm (H)

Net Weight: ~9.2kg

ACE Pro Dimentions:365.94mm (L) × 282.8mm (W) × 234.5 mm (H)

ACE Pro Net weight: ~4.6kg

Machine Installation

For the installation instruction video, please scan the QR code on the right



01 Connect print head cable

1. Press the print head cable (Orange Type-C long cable) down and insert it into the groove above the print head.
2. Use the No. 1 bag screw to secure the cable.




①



M2*14 (2pcs)





1.5

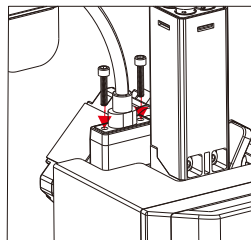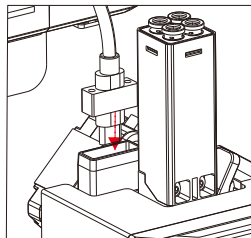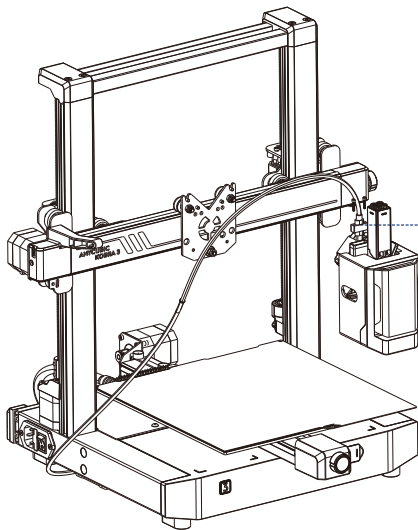


02 Install print head

Install the print head from the back of the printer. Use the No. 2 bag screws to secure the print head by turning it clockwise in the position shown in the figure.

It is recommended to fix the two upper screws first and then the lower screws.

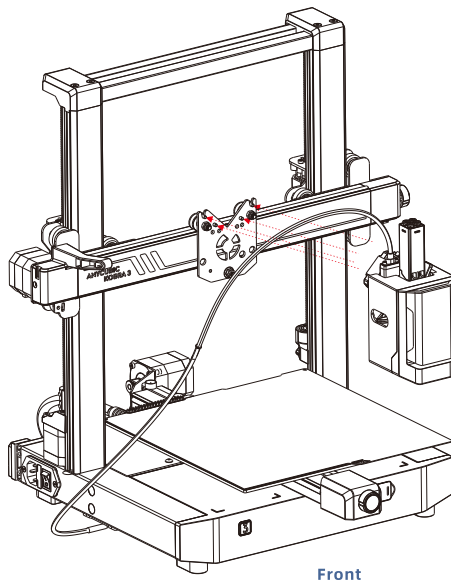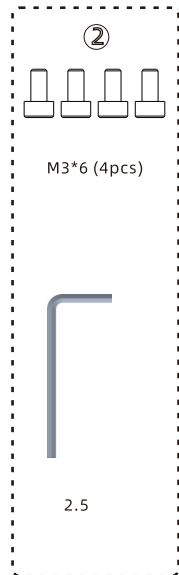





Note: Please install screws in the holes highlighted in white.

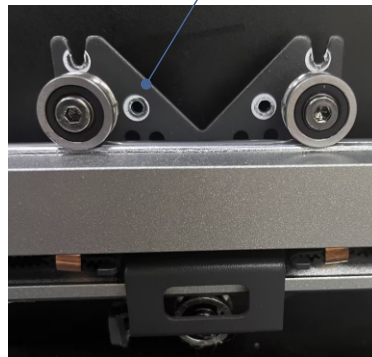

Back

03 Install screen


1. Use No. 3 bag screws to install the screen .
2. Plug the FPC cable into the port behind the screen by pressing the terminal.

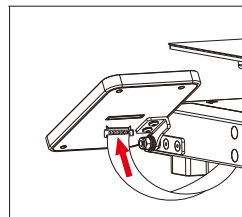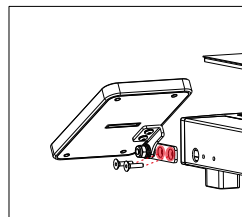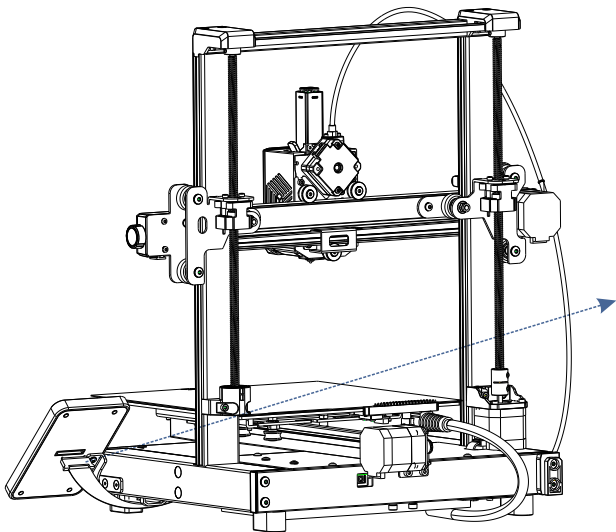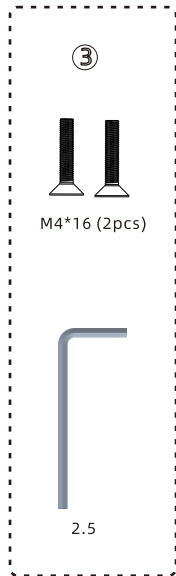

Note: When installing the FPC cable , please make sure this side is facing up.



04 Connect the X-axis motor cable

Insert the motor cable (Orange 6 Pin short cable) upward into the bottom groove on the left side of the X-axis to tighten it. Note that the cable buckle faces forward.

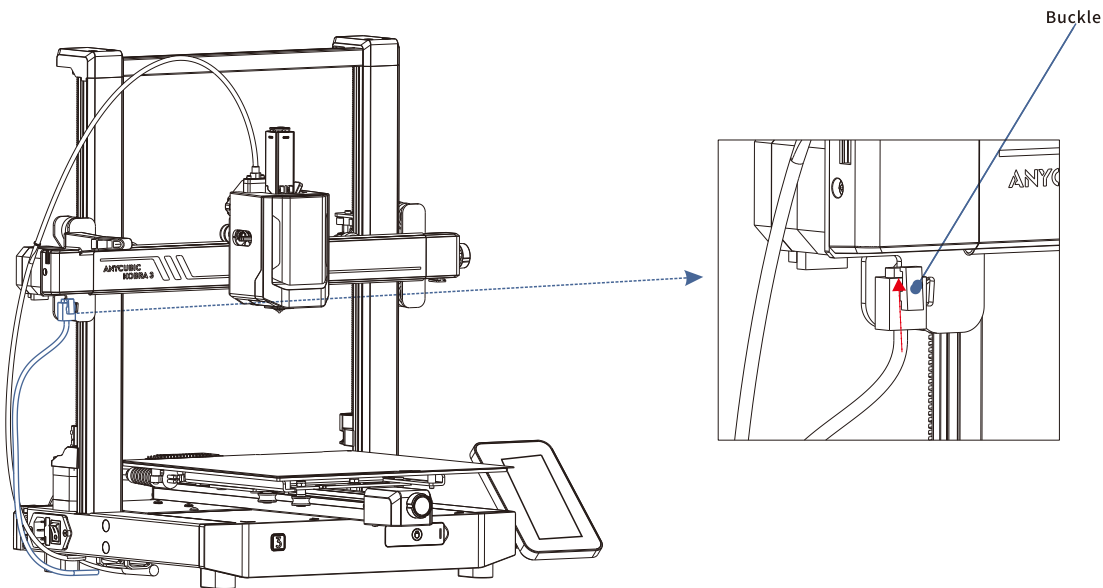


05 Install cable hoder

1. Press down the cable holder to secure it to the groove on the left side of the X-axis.
2. Insert the print head cable into the cable holder.

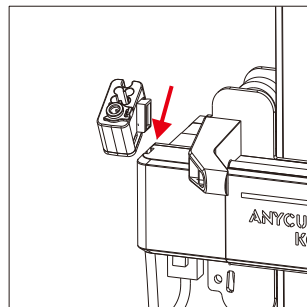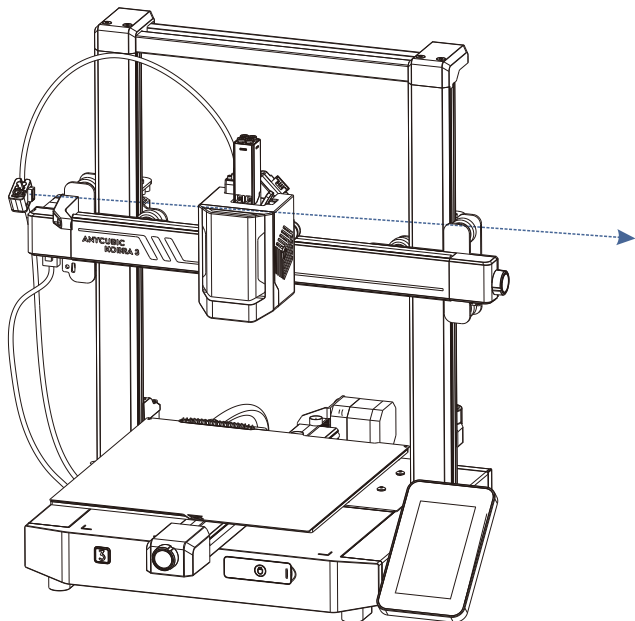




①

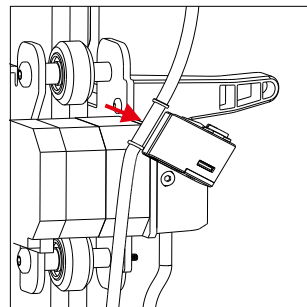

②


06 Install Purge wiper

1. Slide the purge wiper from the back to the front into the groove on the rear side of the X-axis.
2. Use the No. 4 bag screw to secure the Purge wiper from the back and bottom of the X-axis.

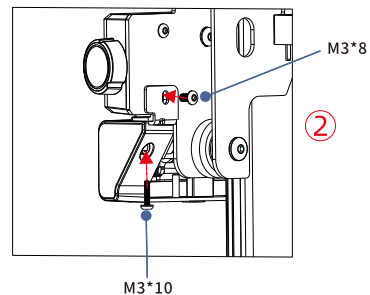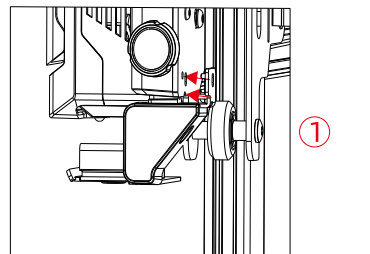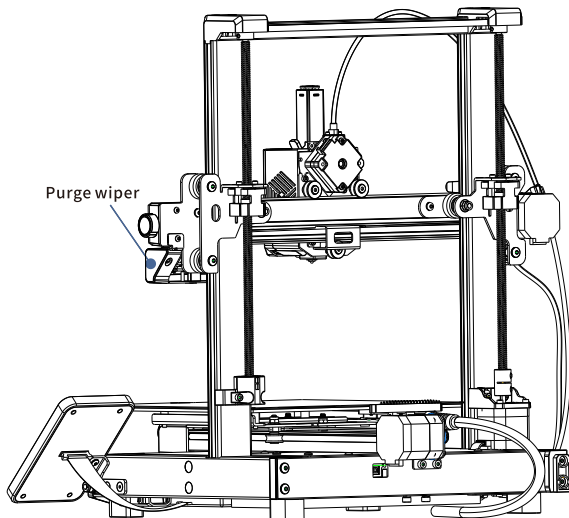



07 Install Filament tube (skip this step if printing in multiple colors)

1. Insert one end of the Individually packed short filament tube into the hole above the print head and the other end into the cable holder.
2. Snap the filament tube and print head cable into the cable organizer.

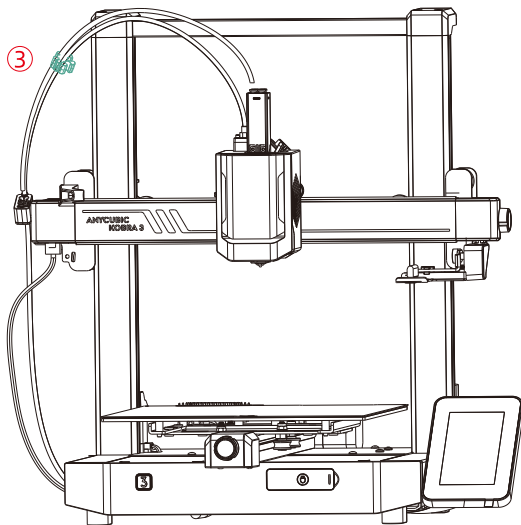




Note:

If the filament tube cannot be inserted into the cable holder successfully, you can first remove the blue retainers on the cable holder, insert the filament tube, and then put the blue retainers back to its original position.

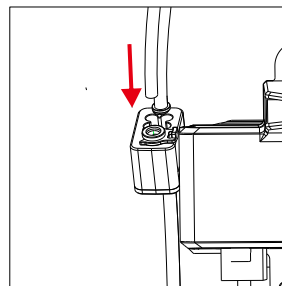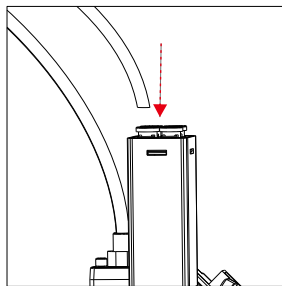






08 Install Spool holder (skip this step if printing in multiple colors)

1. Put the cylindrical handle into the spool holder hole, and then rotate it at a certain angle to fix it.
2. Press the spool holder down and insert it into the groove behind the printer base.

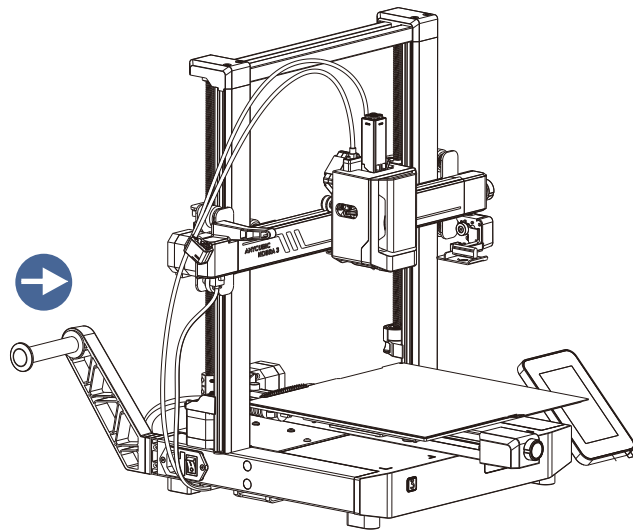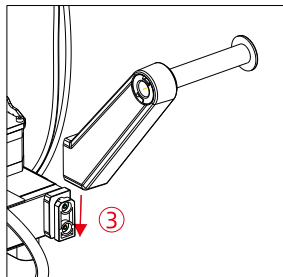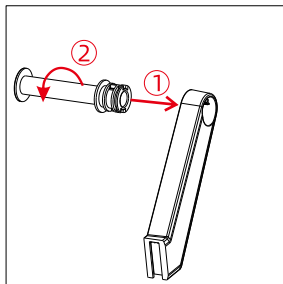

09 Install ACE Pro

- 1.Put ACE Pro to the left side of the Kobra 3 printer ,spacing 10-15cm.
- 2.Insert the 4-pin end of the cable into the hole on the left side of the peripherals,Note that the cable buckle faces downward
3. Insert all four filament tubes into the printhead filament hub.
4. Pass all four filament tubes through the cable holder.
- 5.Use cable organizer to secure the cable.

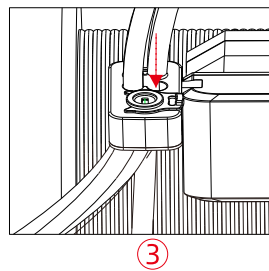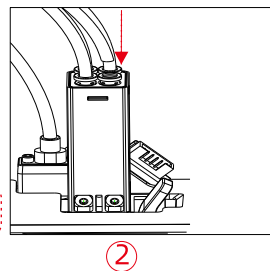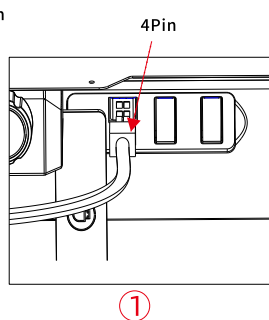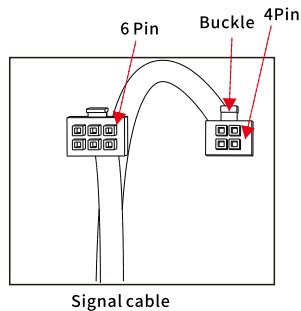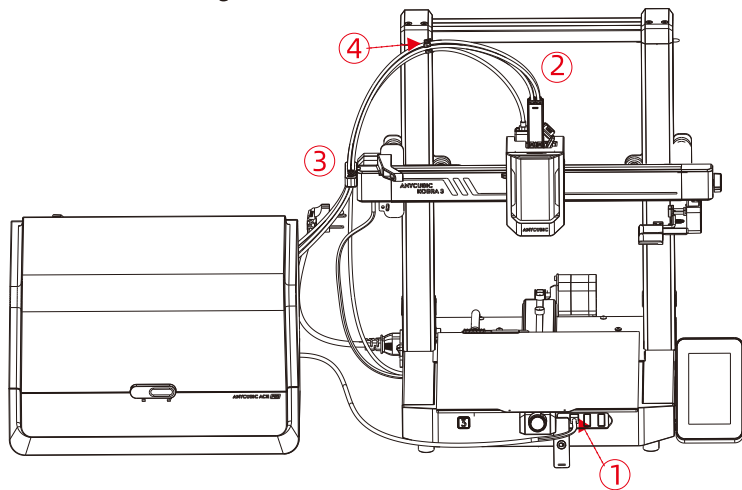


Please pay attention to insert the filament tubes to the end





09 Install ACE Pro


1. Insert the 6-pin end of the cable into the hole on the left corner of ACE Pro, Note that the cable buckle faces outward.
2. Remove the four blue retainers at the filament tube connection port.
3. Insert all four filament tubes into the filament tube connection ports of the ACE Pro (Note: filament tubes are matched in no order).
4. After completing the above operations, install the four blue retainers back to their original positions.

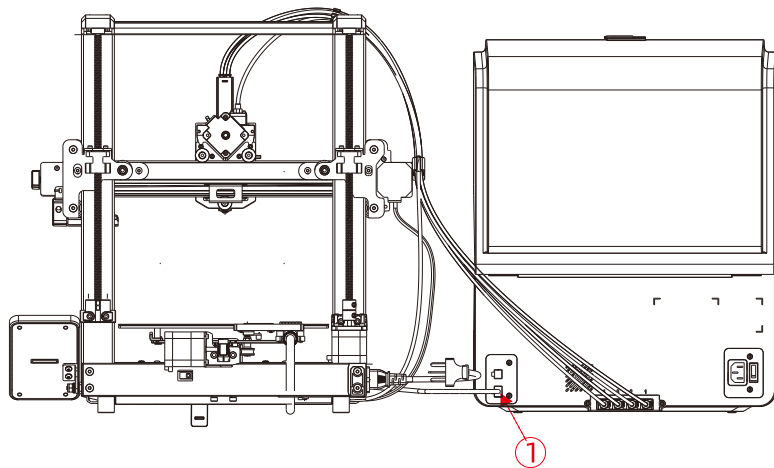

Please pay attention to insert the filament tubes to the end

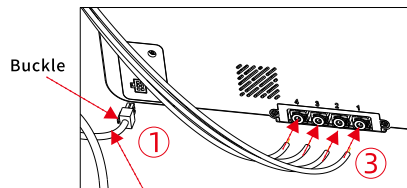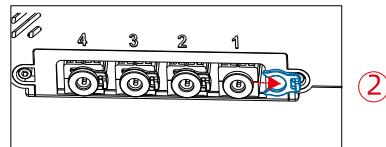


6 Pin

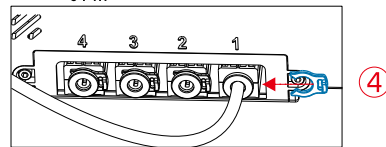

Check Before Use

1. Pulley elastic adjustment

Check if the print head is shaking. If it is, adjust the hexagonal isolation column located underneath the print head until it slides smoothly and without shaking.

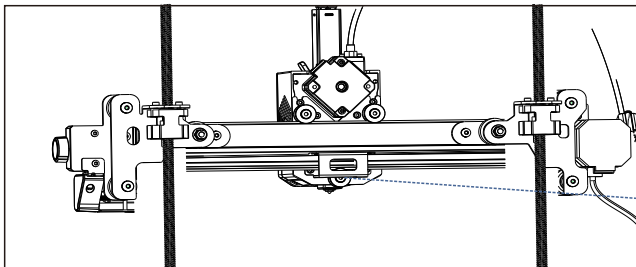


Print head



Adjust the hexagonal spacer behind D-wheel

Check if the print bed is shaking. If it is, adjust the hexagonal isolation column located underneath the print bed until it slides smoothly and without shaking.

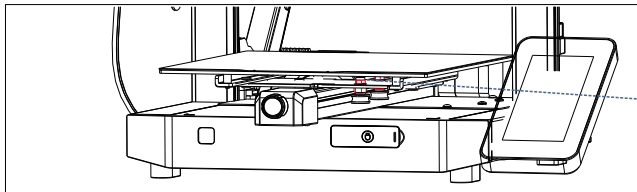

Platform


Adjust the hexagonal spacer on the Y axis

Similarly, the pulleys on both sides of the gantry frame can also be adjusted.





2. Belts

Please manually move the print head and print platform. If there is any difficulty or abnormal noise during the movement, adjust the tensioner to ensure smooth sliding of the print head or platform.

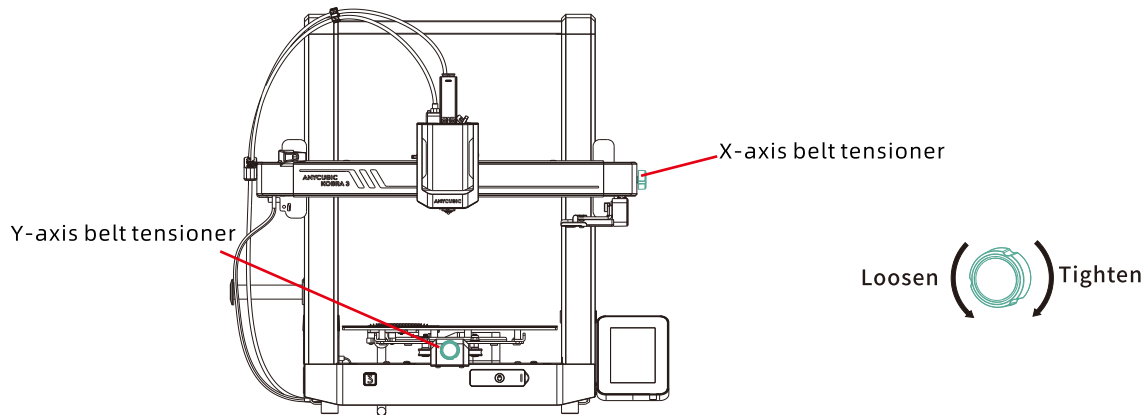

3. Connecting to Power

Connect the printer and ACE Pro to power outlet with the power cable, then power on the printer.

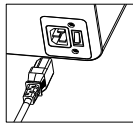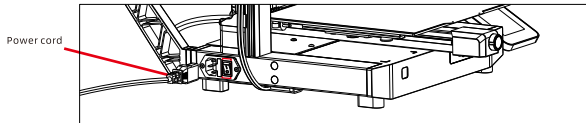

Backside of ACE Pro


Note:

1. When inserting the power cord, please avoid crossing it with the print head cable to prevent interference.
2. Before turning on the power, please check the printer power level matches the local voltage.




Power-on guide(when ACE Pro is not connected)


① Language

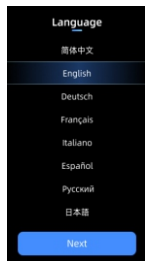


② Area

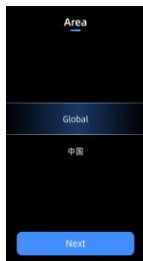

③ Network

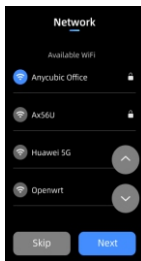

④ Cloud

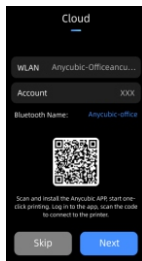


⑤ Complete setup




⑥ Insert U-Disk



⑦ Self Test

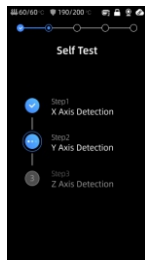


⑧ Auto-Level

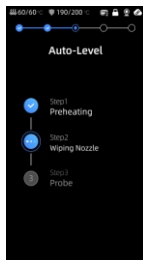

⑨ Load Filament



⑩ Vibration compensation ⑪ Print The Model

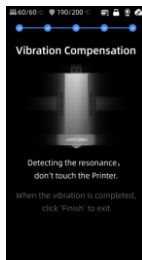


Note: The current interface is for reference only. Due to ongoing feature upgrades, please refer to the UI of the latest firmware release for accurate information.




Power-on guide(when ACE Pro is connected)


① Language

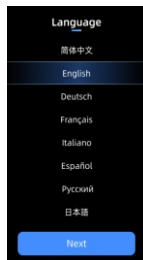


② Area

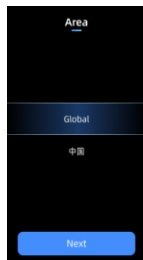

③ Network

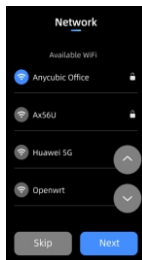

④ Cloud

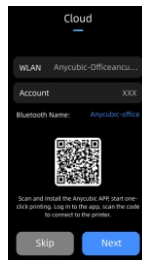


⑤ Complete setup




⑥ Insert U-Disk



⑦ Self Test

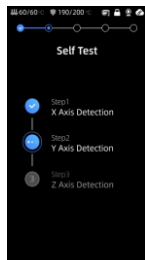



⑧ Auto-Level

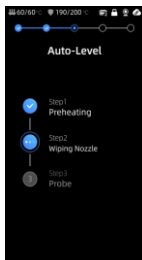

⑨ Load Filament



⑩ Vibration compensation ⑪ Print The Model

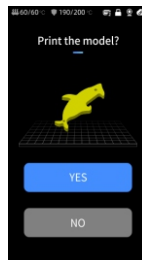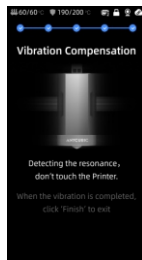


Note: The current interface is for reference only. Due to ongoing feature upgrades, please refer to the UI of the latest firmware release for accurate information.






Loading Filament

1. Place at least one roll of filament in ACE Pro.
2. Insert one end of the filament into the filament inlet, and ACE Pro will automatically pre-load the filament after detecting it.
3. Press the **[Filament]** interface, click to select a filament, and then edit mark will appear. Select the corresponding material and color and click save, If you use Anycubic RFID filament, the filament color and material will be automatically identified.
4. After completing the above operations, click **[Extrude]**, wait for the nozzle to heat to the preset temperature, and the filament will be extruded from the nozzle.

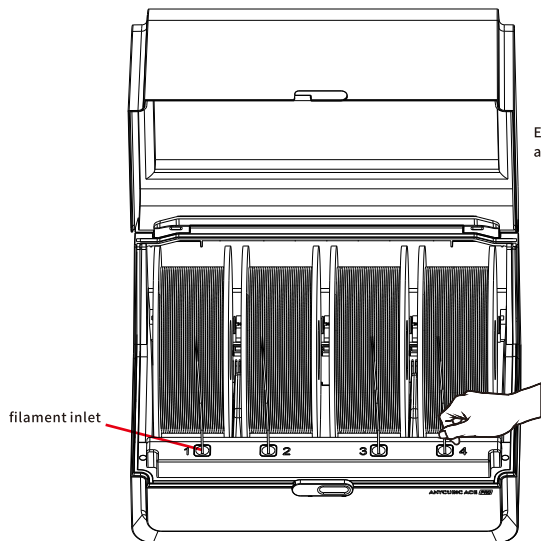

Edit color
and material


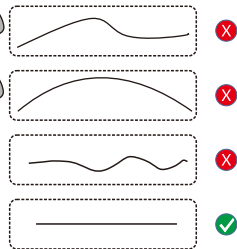
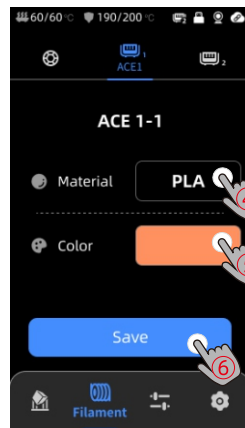
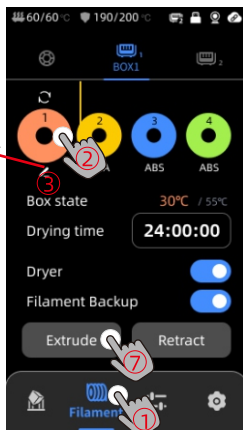


Note: Before inserting the filament into the filament inlet, make sure to straighten the end of the filament.



Printer Binding

1. Please connect the printer to the network first.
2. Scan the QR code on the Printer screen, QR code path: [Settings] - [Cloud], download the ANYCUBIC App, register and log in to the ANYCUBIC account.
3. Open ANYCUBIC App, click [+intiate printing], click [Scan], and scan the QR code on the Printer screen to bind ANYCUBIC account.

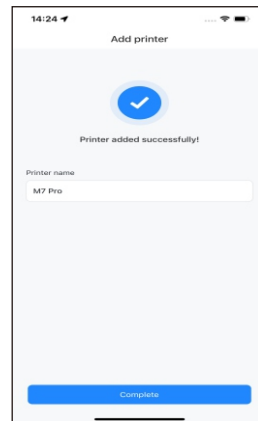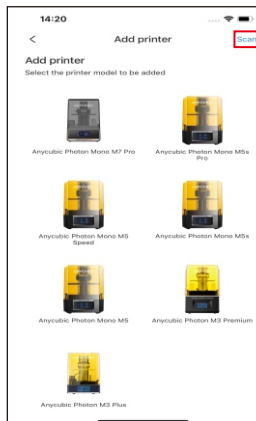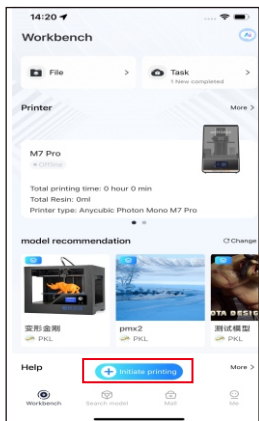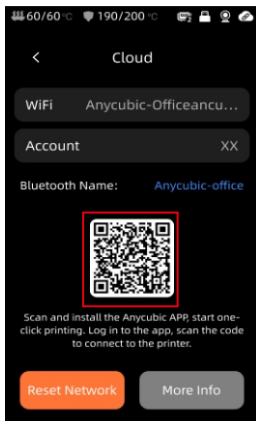

Software Installation and binding

1. Software installation procedure

Open the attached USB Drive and navigate into the path: \Files_English_Ancubic Kobra 3 combo\Ancubic Slicer, choose Windows /Mac to install the corresponding version, double-click on the Anyubic Slicer application to begin the installation .


2. Please connect the printer to the network before performing the following operations.

3. Anyubic Slicer usage instruction:

Open the attached USB Drive and navigate into the path: \Files_English_Ancubic Kobra 3 combo\Ancubic Slicer \Anyubic Slicer_Usage Instructions

- ① After the software installation is completed, enter the main interface and click **[Workbench]** or **[Log in to begin remote print]**

- ② If you already have an APP account, you can directly enter your account and password to log in. If not, click **[Sign Up Now]**.

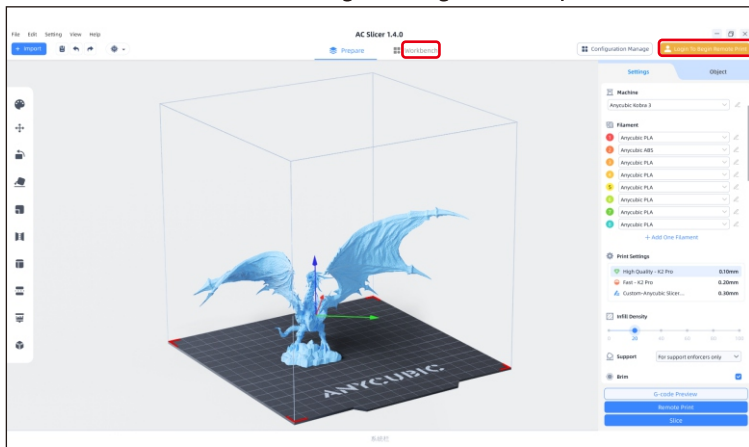

Email Login

Mobile Login

Account

Please enter your email address

Password

Please enter your password

☒ Remember Me


[Forget Password?](#)

Log In


No Account ? [Sign Up Now](#)

Software Installation and binding

③ Click 【Add Printer】

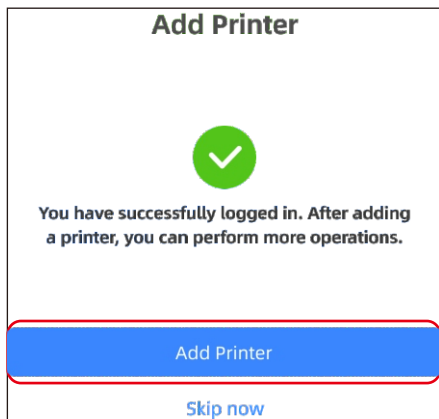


④ Automatically find printers on the same LAN as the current device.
If the APP has been bound to the machine and logged in to the same account, the information will be automatically synchronized

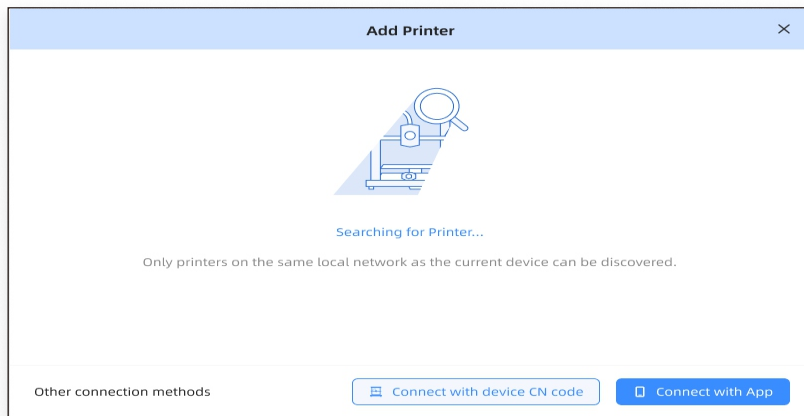


Software Installation and binding

- ⑤ Select the machine that needs to be bound in the automatic search results and click **[Add Now]**
Multiple printers can be connected; if the search is not successful, please click **[Connect with device CN code]**
Or **[connect with APP]**

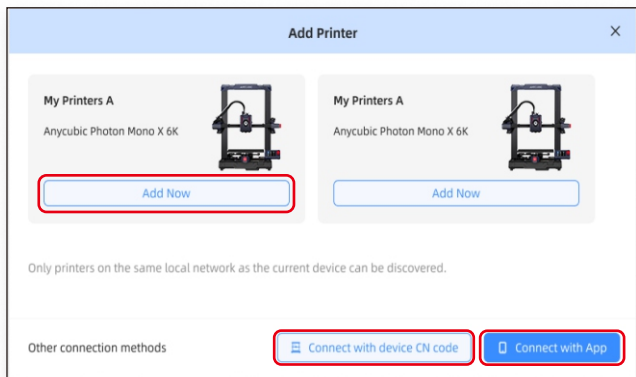

- ⑥ If the search fails, enter the CN code of the device to connect.
Find the CN code path: Select **[Settings-Cloud Platform -More Information]** on the printer
You can view the CN code

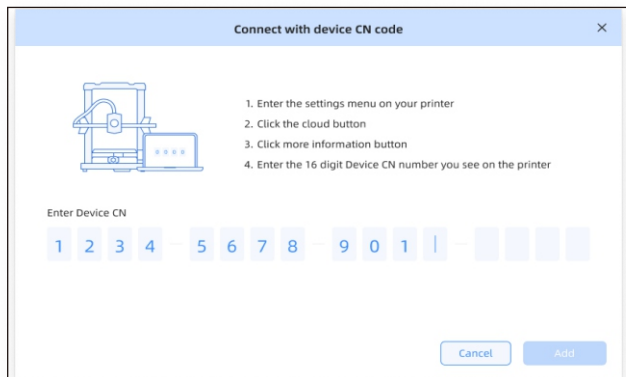

Note:


The software interface is subject to the latest version





First print

1) Select a model from the local or U-DISK and start printing.


*We recommend using one of the pre-loaded files as a first test print.

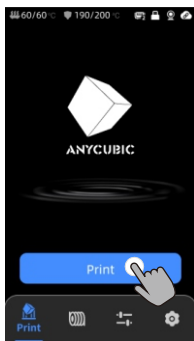


Select the model from local storage or U-DISK.

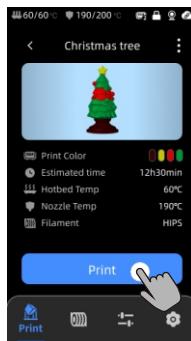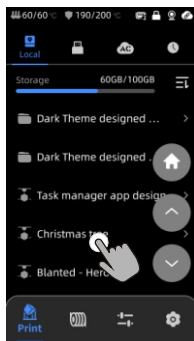

Print

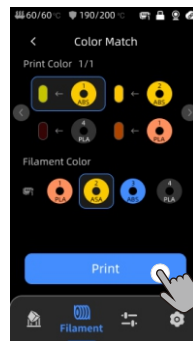

select color, Press "Print".

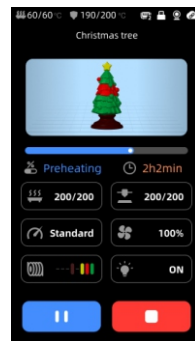

Printing in progress

Note :

The built-in model is subject to reality ⚠️

Other Function Descriptions

Vibration Compensation: To achieve better printing results, it is recommended to perform a vibration compensation check after printing for more than 300 hours or when the machine has been moved. This feature helps reduce the occurrence of banding during high-speed printing. Regular vibration compensation checks help maintain the stability and accuracy of the printer, thereby improving print quality.

Press "Tools" - "Control" - "Vibration compensation" and wait for the machine to complete the calibration. Please do not touch the machine during the calibration process.

Filament Runout Detection : This function is designed to prevent printing failures when the filament runs out during the middle of a print .It alerts the user to replace the filament before continuing the print ,effectively preventing wasted prints due to filament shortage.

Power Loss Resume:when printing using the filament holder ,in the event of a sudden power outage or accidentally turning off the machine ,this function does not require manual setup.Simply reconnect the power and turn on the machine .You can then resume the print.


Note:

ACE pro currently does not have the function of power loss resume



Leveling

Press "Tools" - "Control" - "Auto Level". Wait for the machine to complete the leveling process.

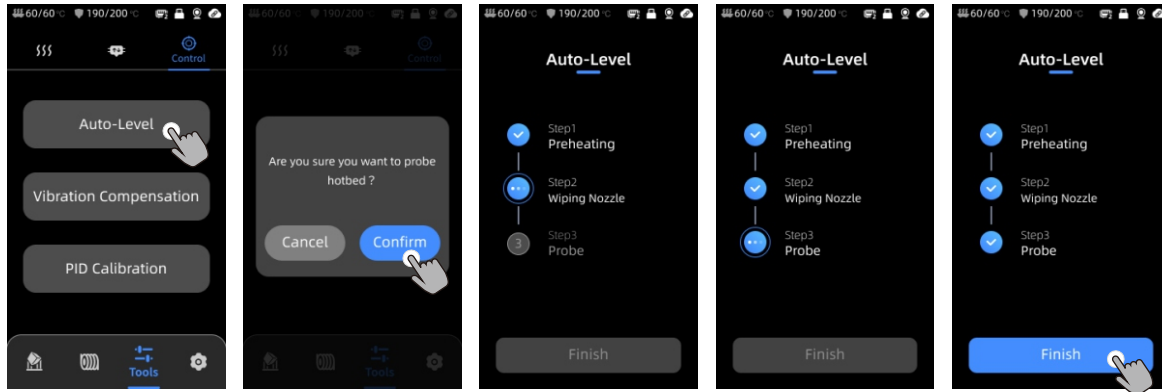

Note:

Please check whether the PEI magnetic spring board is installed before leveling.



Maintenance Recommendation

Z-axis Lead Screws


*The Z-axis lead screw needs regular lubrication, as proper lubrication ensures smooth movement. It is recommended to perform maintenance every three months.

Before applying lubricating grease to the Z-axis lead screws, it is important to clean them thoroughly, removing any dust or plastic particles. Then, using the axis movement controls, move the print head to a higher position. Apply a thin coat of lubricating grease on the Z-axis lead screws, and then home the printer again. You can repeat this movement process a few times to ensure the grease is evenly distributed over the Z-axis lead screws. Once completed, clean off any excess lubricating grease that may have accumulated near the leadscrew nuts.

X/Y-axis double metal spindles


*The X/Y-axis double metal spindles require regular lubrication, as proper lubrication ensures smooth movement. It is recommended to perform maintenance once a month.

Before applying lubricating grease to the X/Y-axis double metal spindles, it is important to clean them thoroughly, removing any dust or plastic particles. Then, apply a thin coat of lubricating grease on the X/Y-axis double metal spindles and home the printer. You can repeat the movement process a few times to ensure the grease is evenly spread over the X/Y-axis double metal spindles.

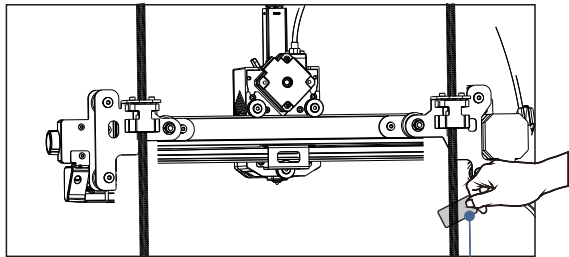

Z-axis Lead Screws

Grease

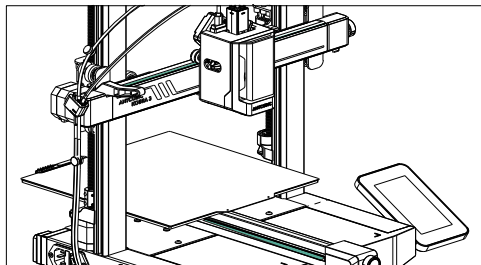

X/Y-axis double metal spindles



*Please scan the QR code for more maintenance information.




Maintenance Recommendation

Hotend replacement guide



Hotend replacement



1. Before replacing the hotend, please cool down the nozzle first, click [Tools] - [Preheat] - [Cooling], wait for the nozzle temperature to drop below 40 degrees, and turn off the printer.
2. Press both sides of the print head lightly and pull the print head front cover forward to remove it.
3. Gently pull the bottom black and white lines forward to remove them.

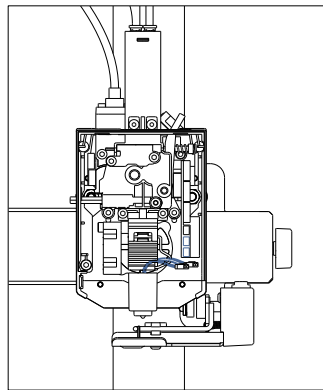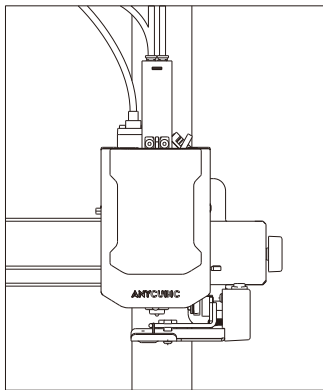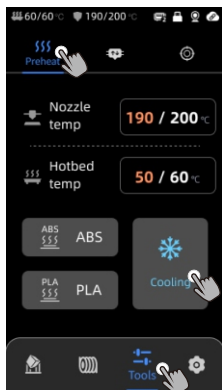

Maintenance Recommendation

Hotend replacement

4. Pull the retaining spring forward to loosen the hotend.
5. Insert the new hotend upwards to the very bottom, and note that the white wire is at the front.
6. Press the retaining spring back to fix the hotend.
7. Plug the two wires back to their original positions, and note that the black wire is at the bottom .
8. After completing the above operations, close the front cover to complete the hot end replacement.

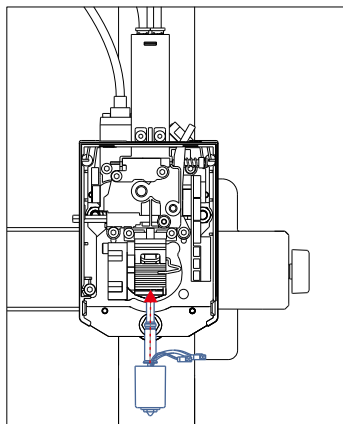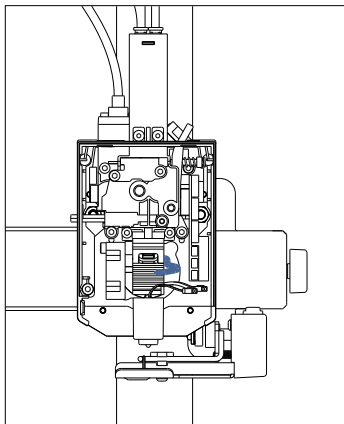

Attention

1. Anycubic 3D printer generates high temperature. DO NOT reach inside of the printer during operation. Contact with extruded materials may cause burns.
2. Use high temperature resistant gloves when operating the product.
3. This equipment is not suitable for use in locations where children are likely to be present.
4. The fuse rating for the printer is 250V 10A. Never replace the fuse with one of a higher amperage, otherwise it may cause fire.
5. The socket-outlet shall be easily accessible.

If the above problems cannot be solved, please initiate consultation in our after-sales service system, and our engineers will reply you in the form of email within one working day.

(<https://support.anycubic.com/>)



Warm tips:

1. Fill in the information based on the SN of the corresponding model. The items with red dots are mandatory.
2. If the order is successful, you will soon receive a reply from the after-sales service system in your mailbox.
3. If you successfully place an order but do not receive an email, please watch out for spam.
4. If the order creation fails, please pay attention to the pop-up reminder on the web page.



Name:Apex CE Specialists GmbH
Add:Habichtweg 1 41468 Neuss Germany
Contact:Wells Yan
Tel:+353212066339
E-Mail:Info@apex-ce.com



Name:APEX CE SPECIALISTS LIMITED
Add:89 Princess Street,Manchester, M1 4HT,UK
Contact:Wells
Tel:+ 441616371080
E-Mail:info@apex-ce.com

FC C E RoHS



M02010057